



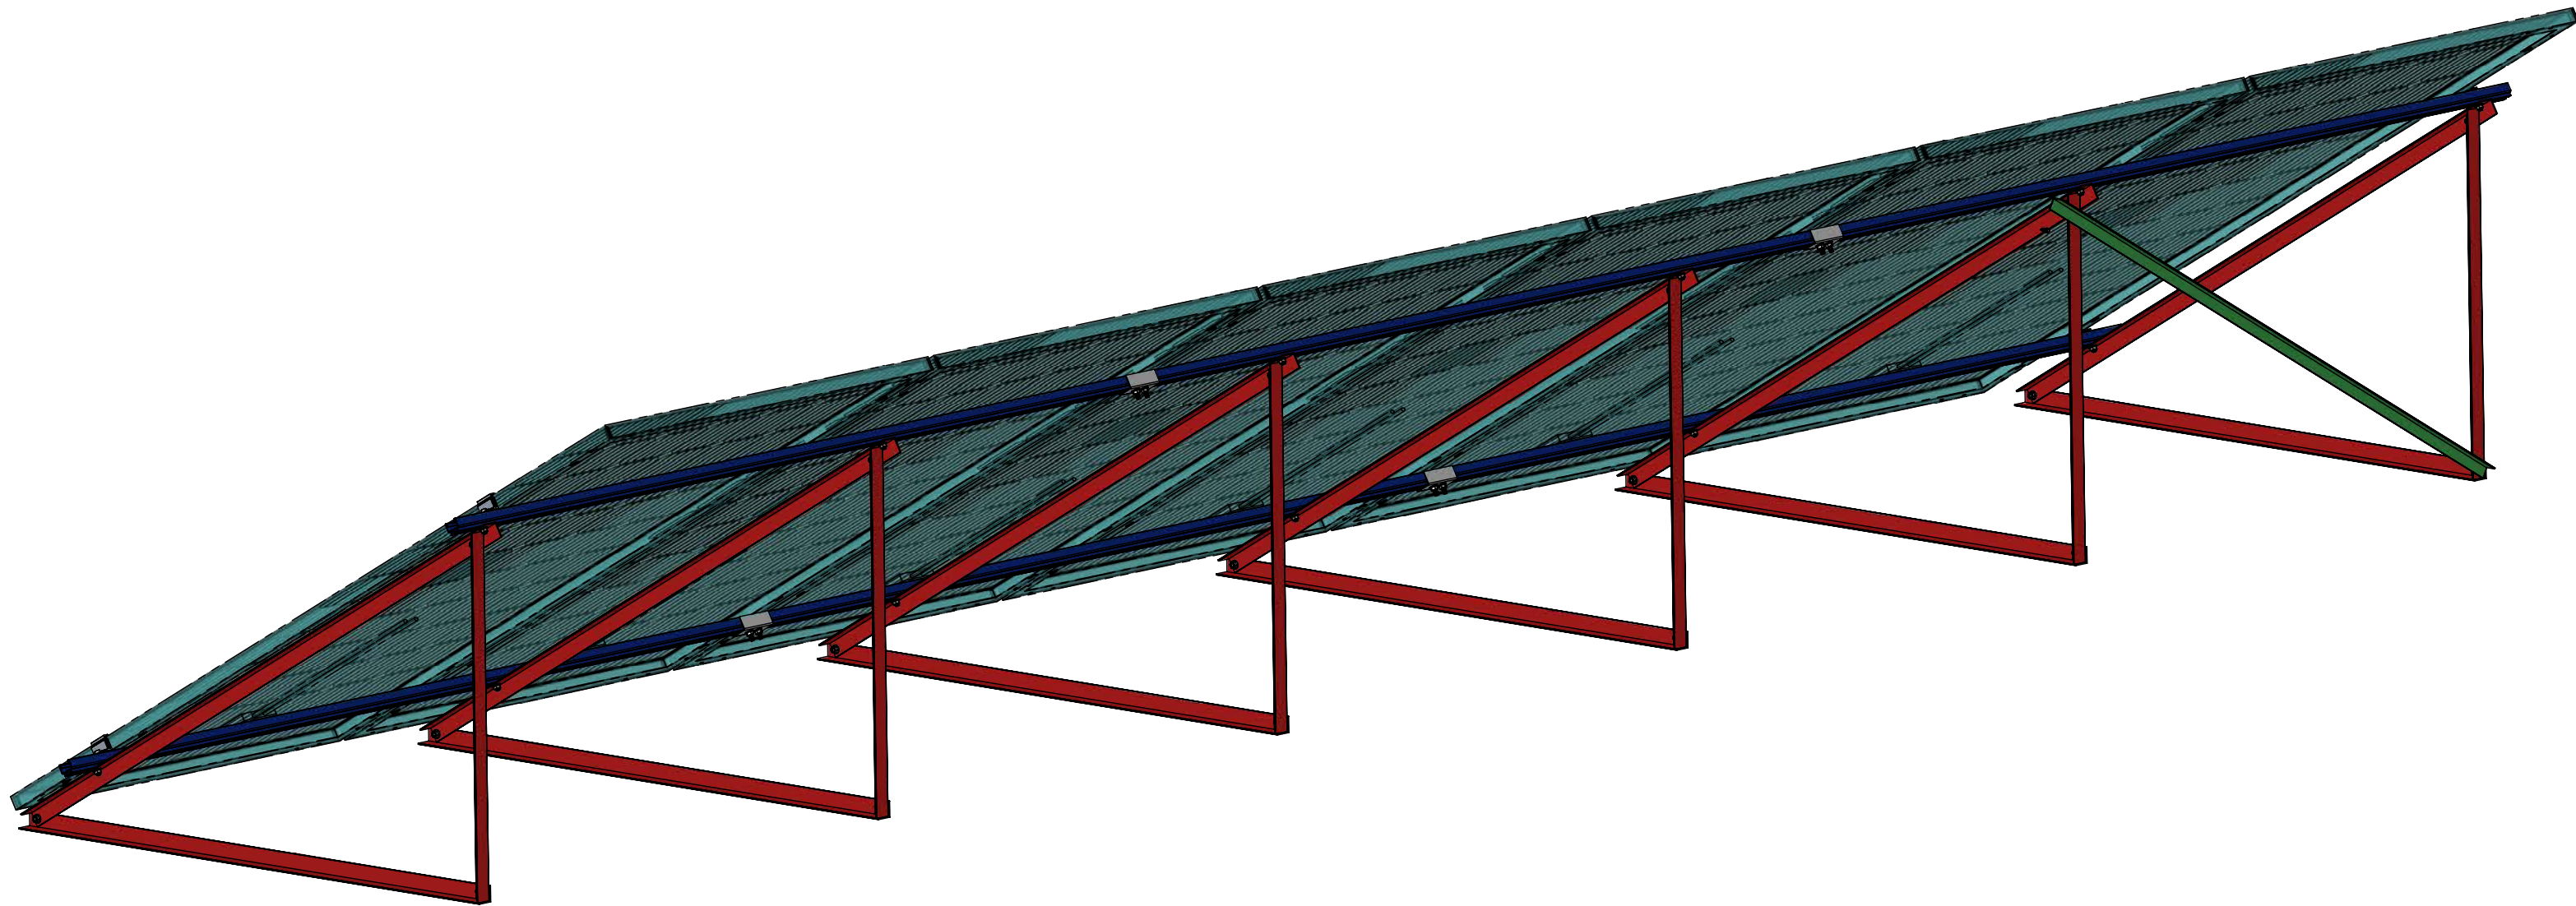









Assembly Instructions

Portrait Triangle Structure




LAYOUT OF IMPLANTATION

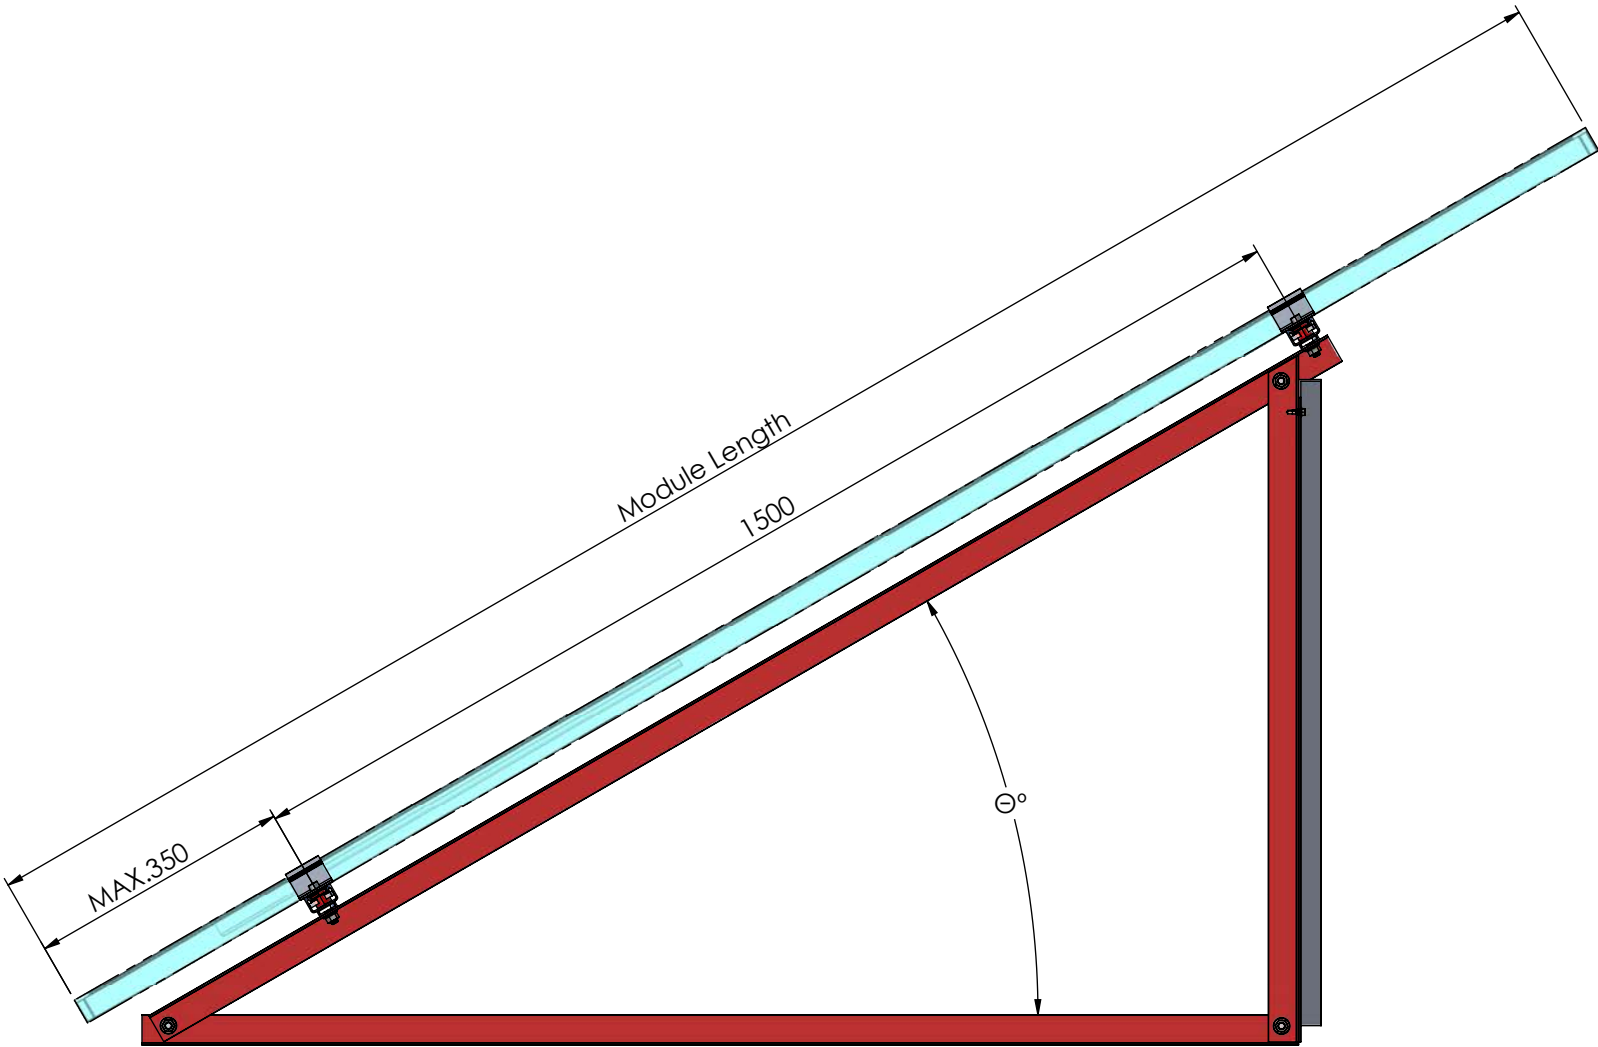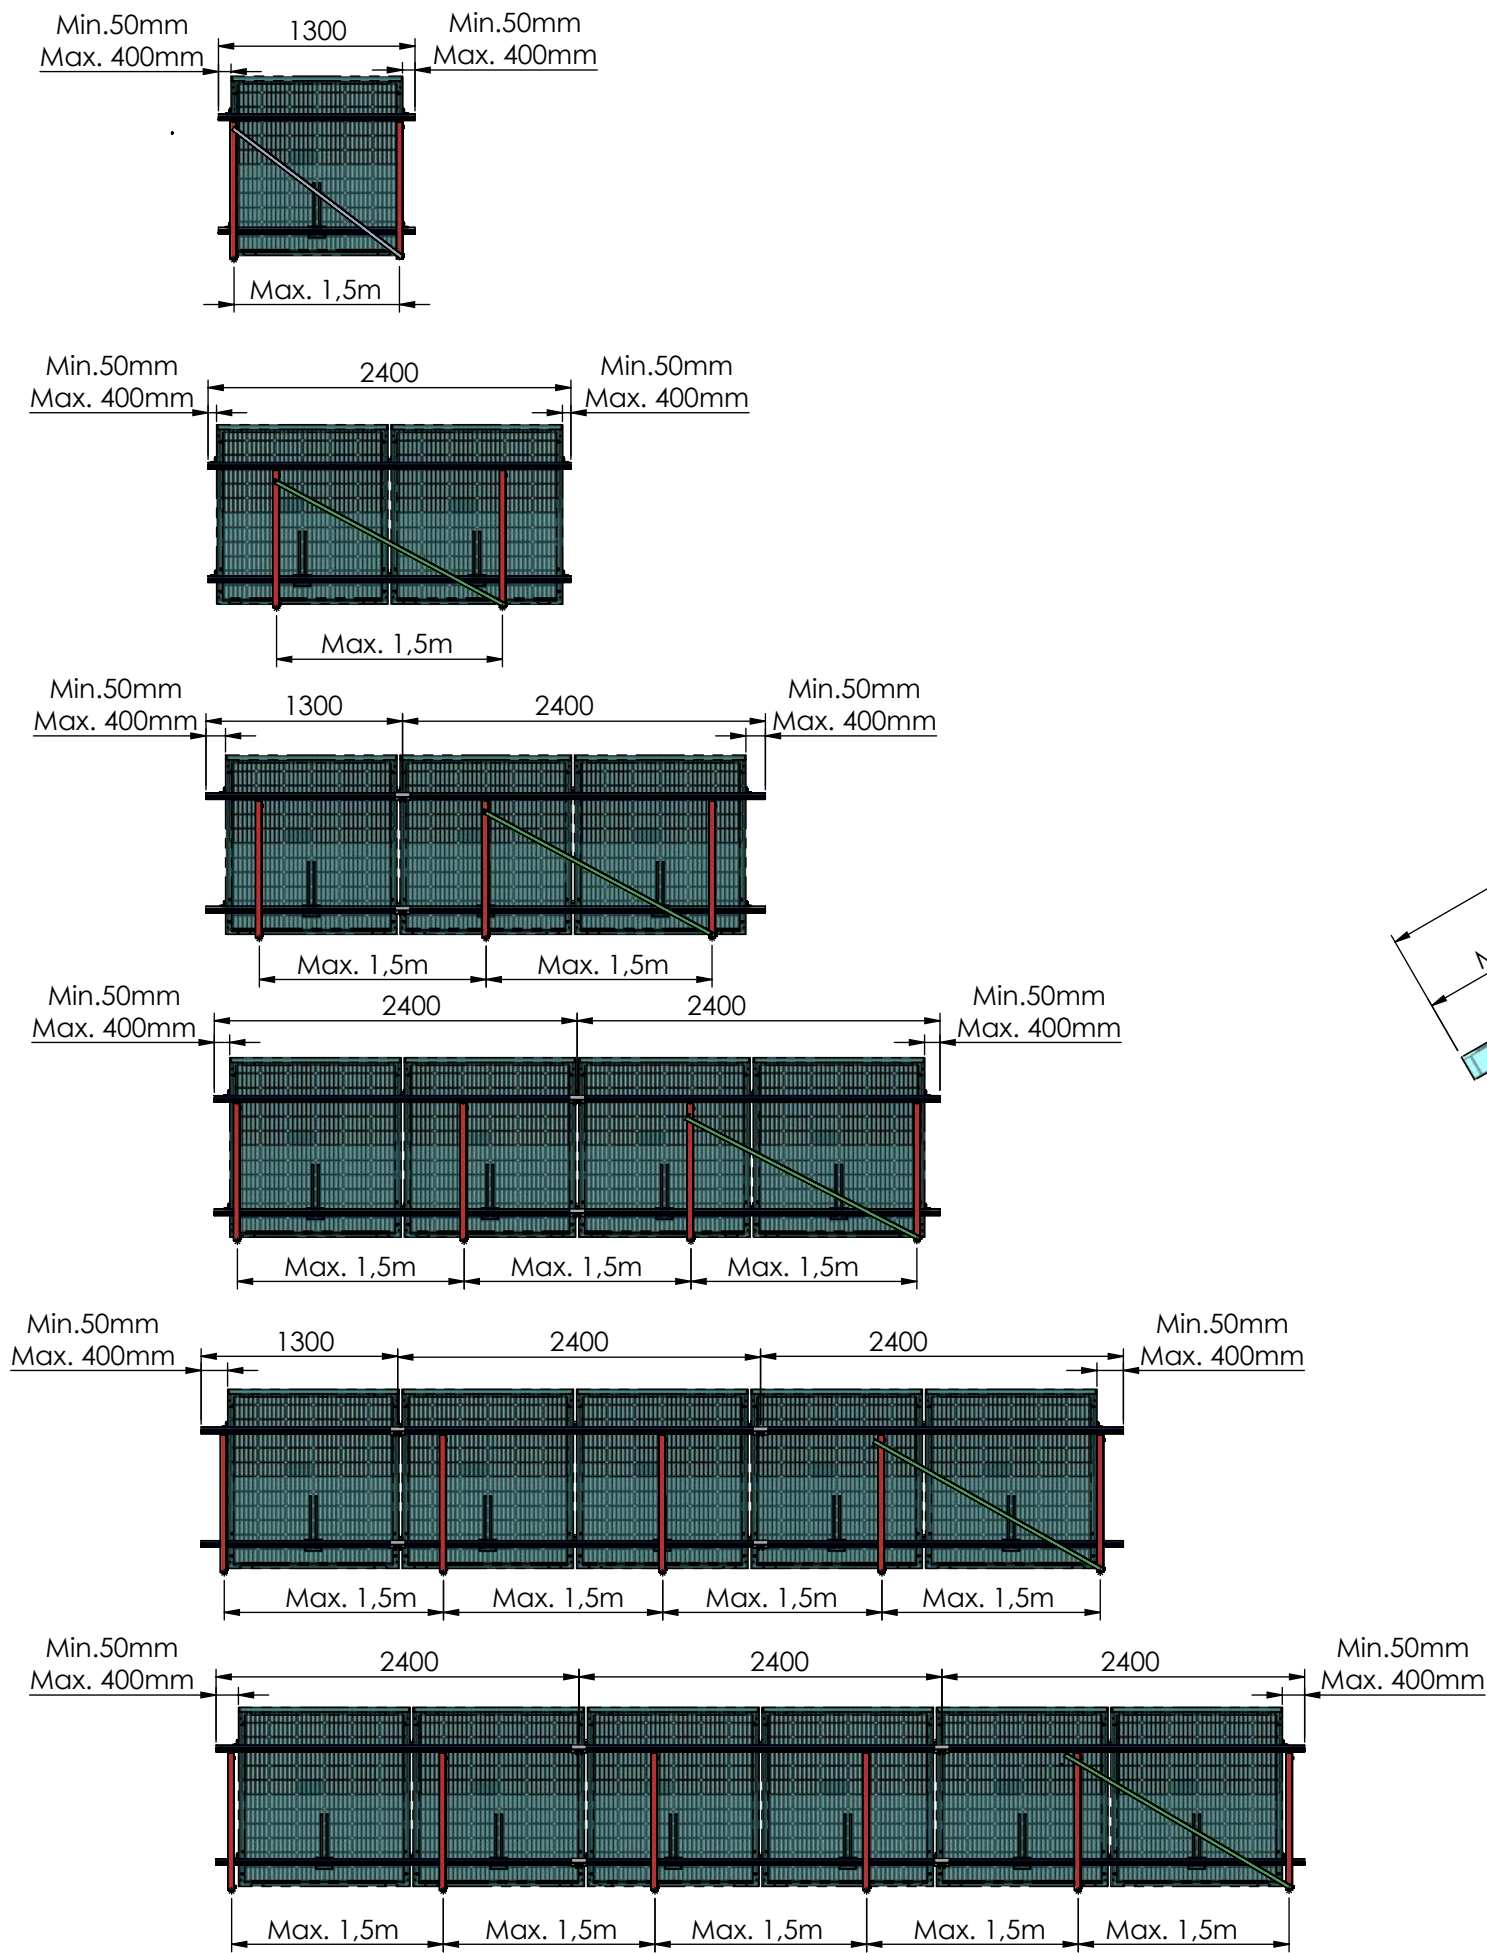


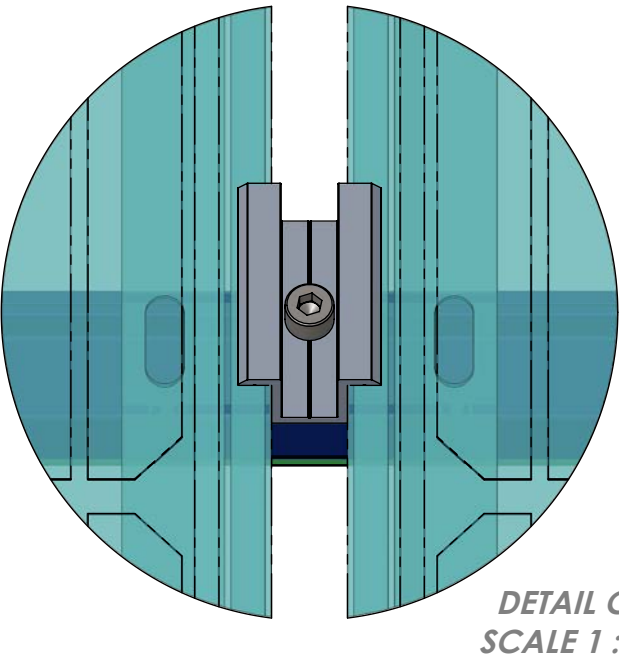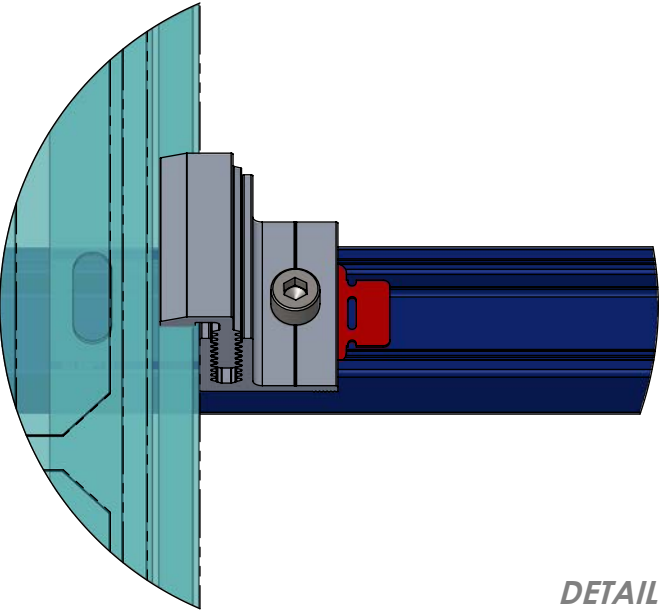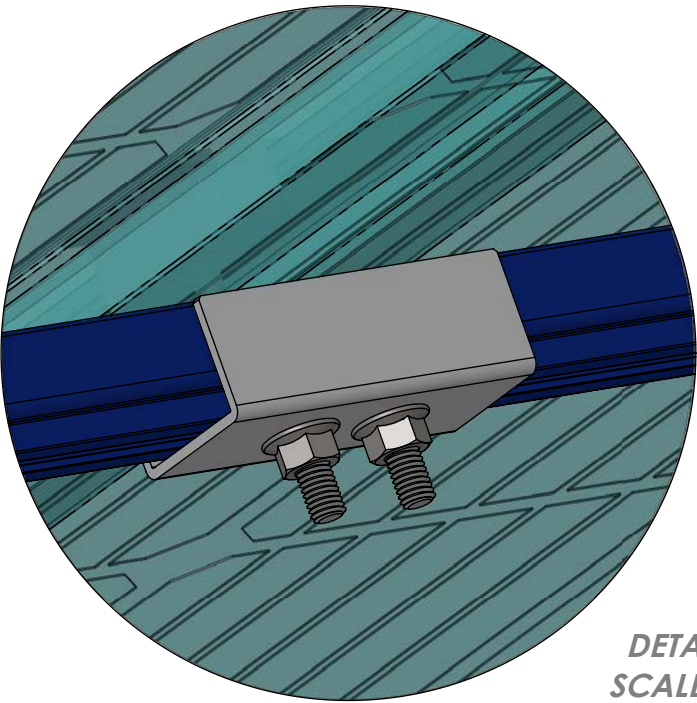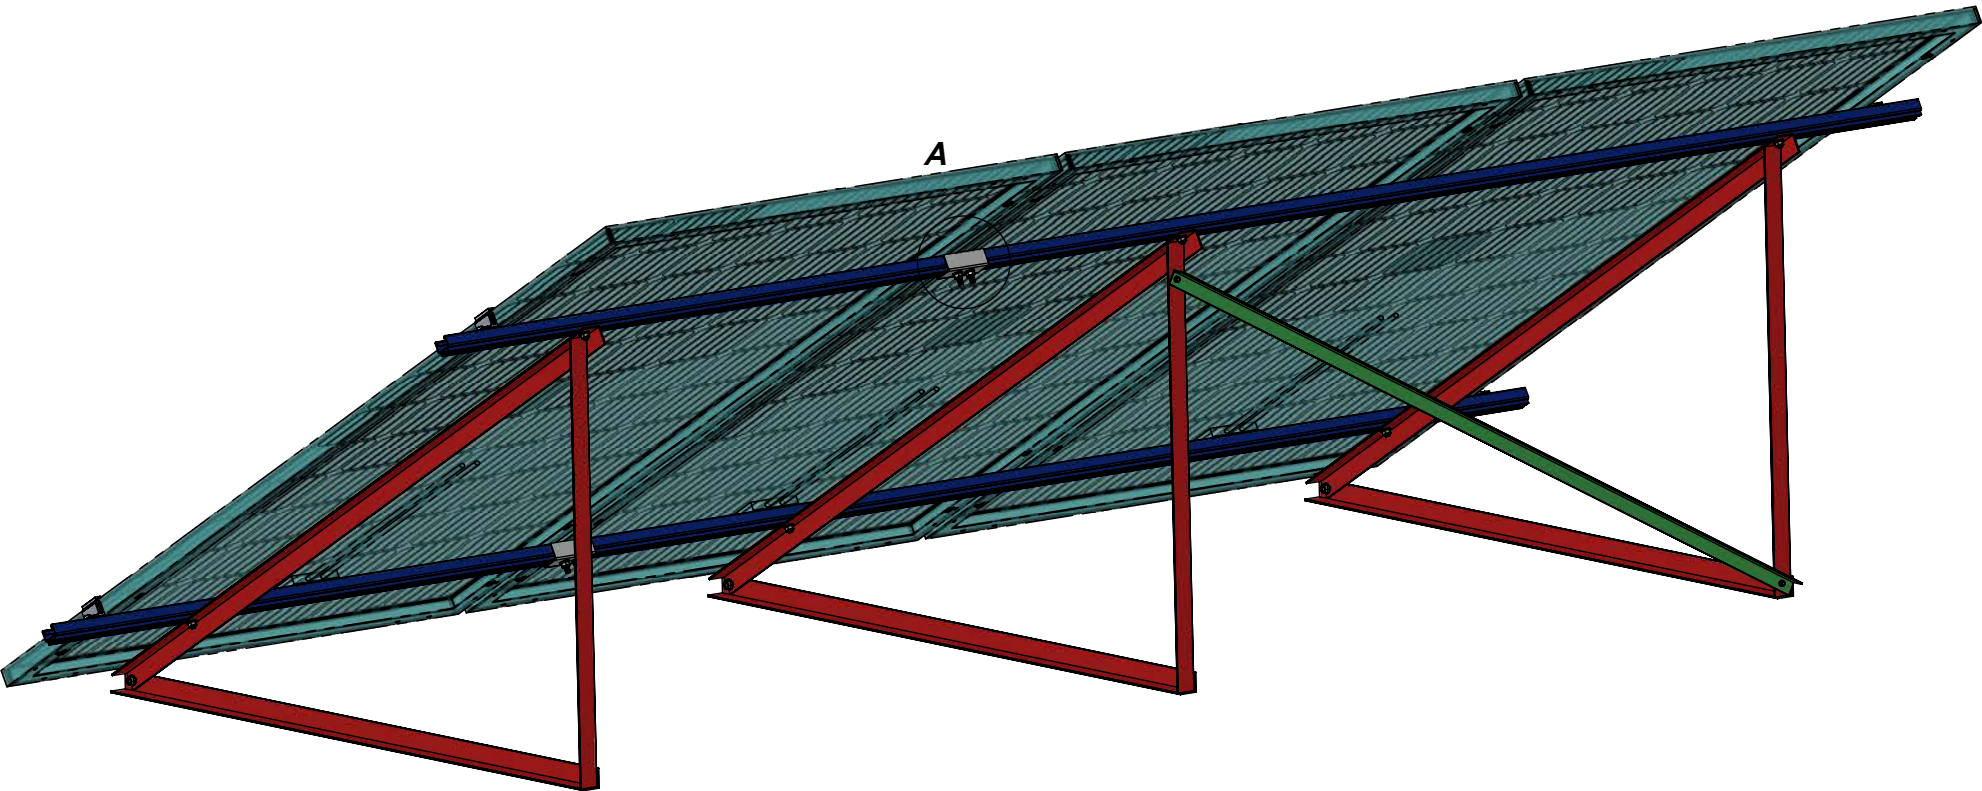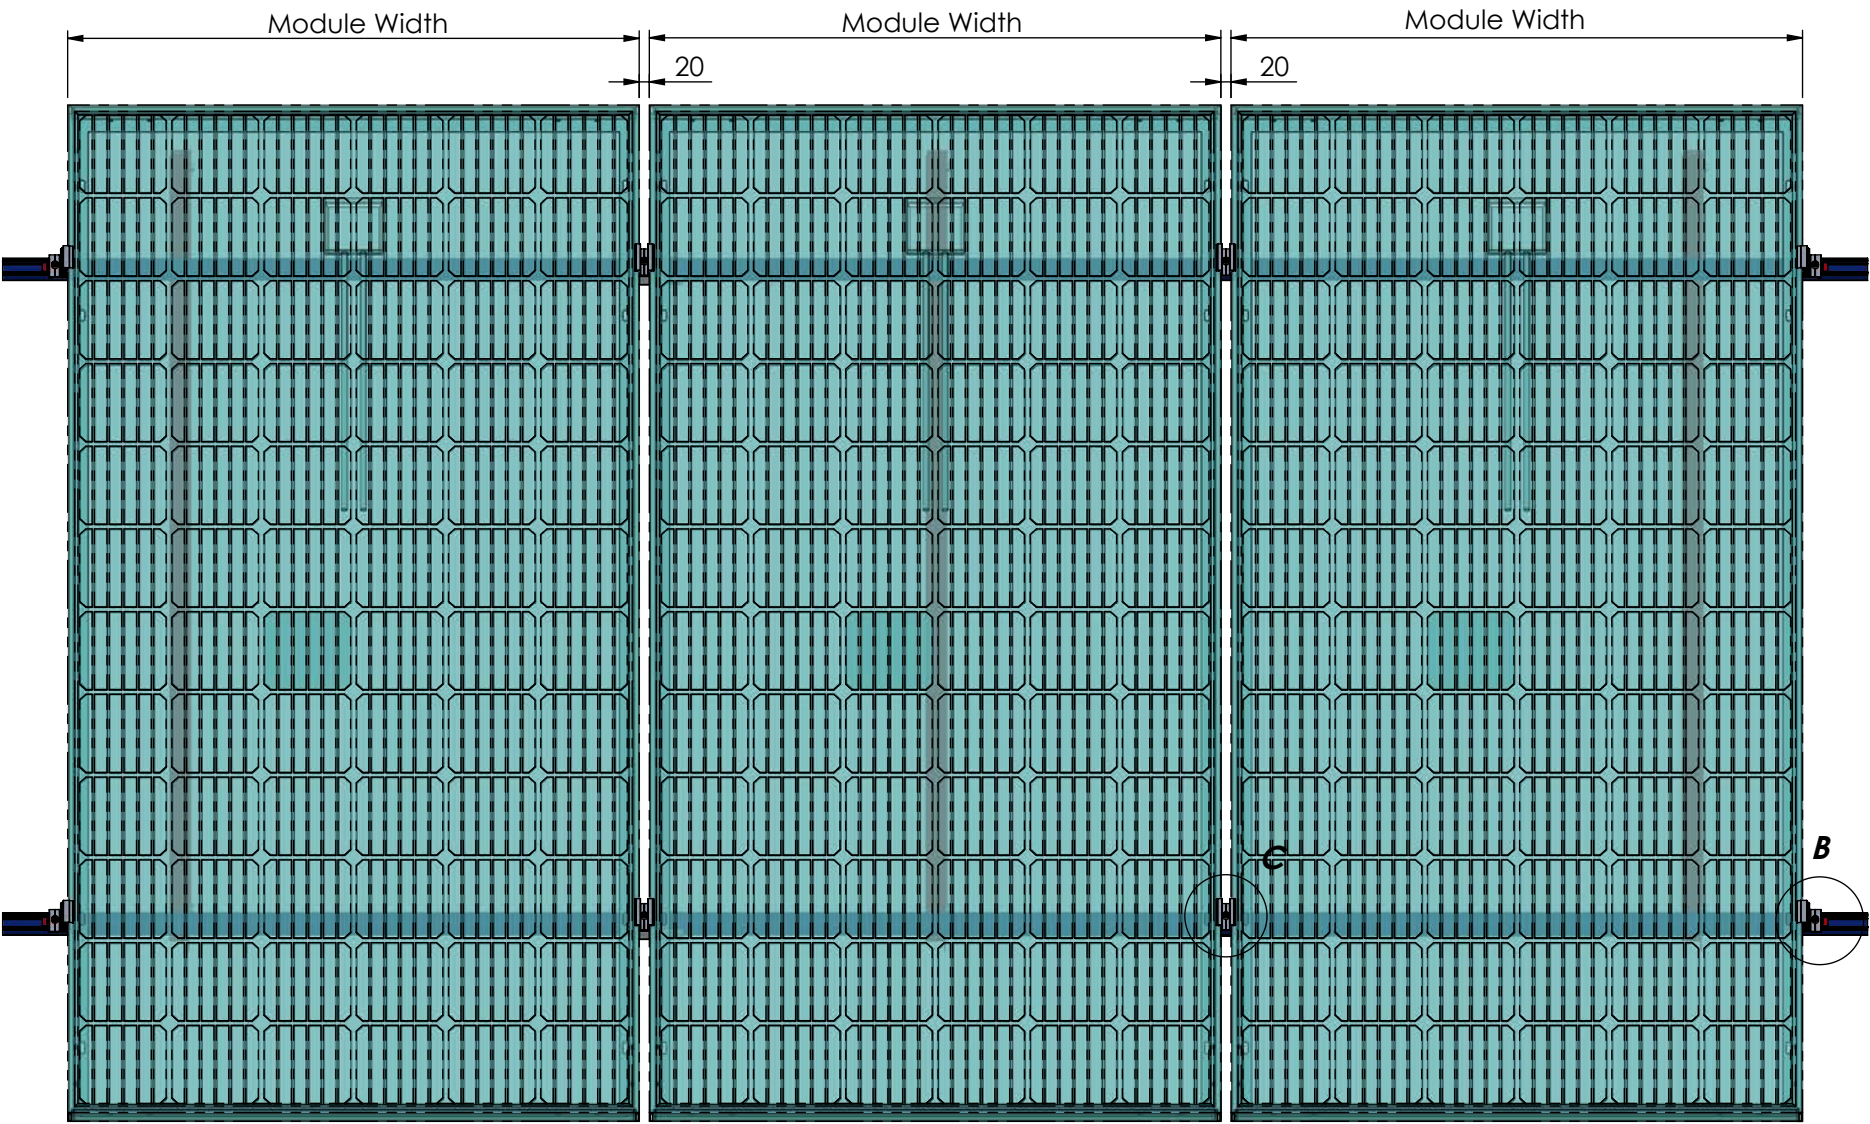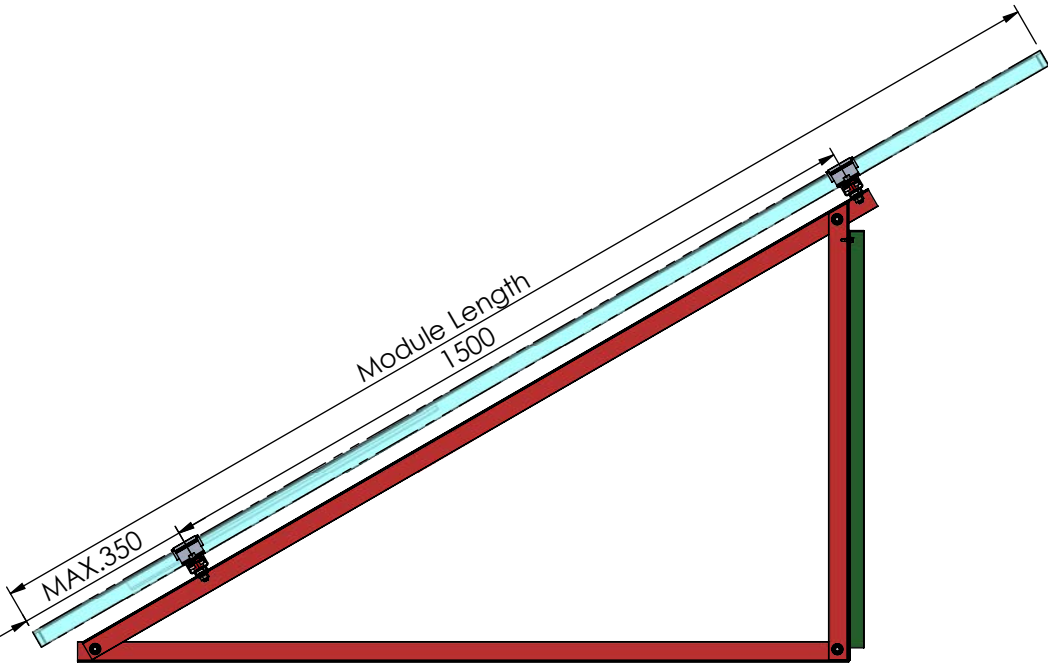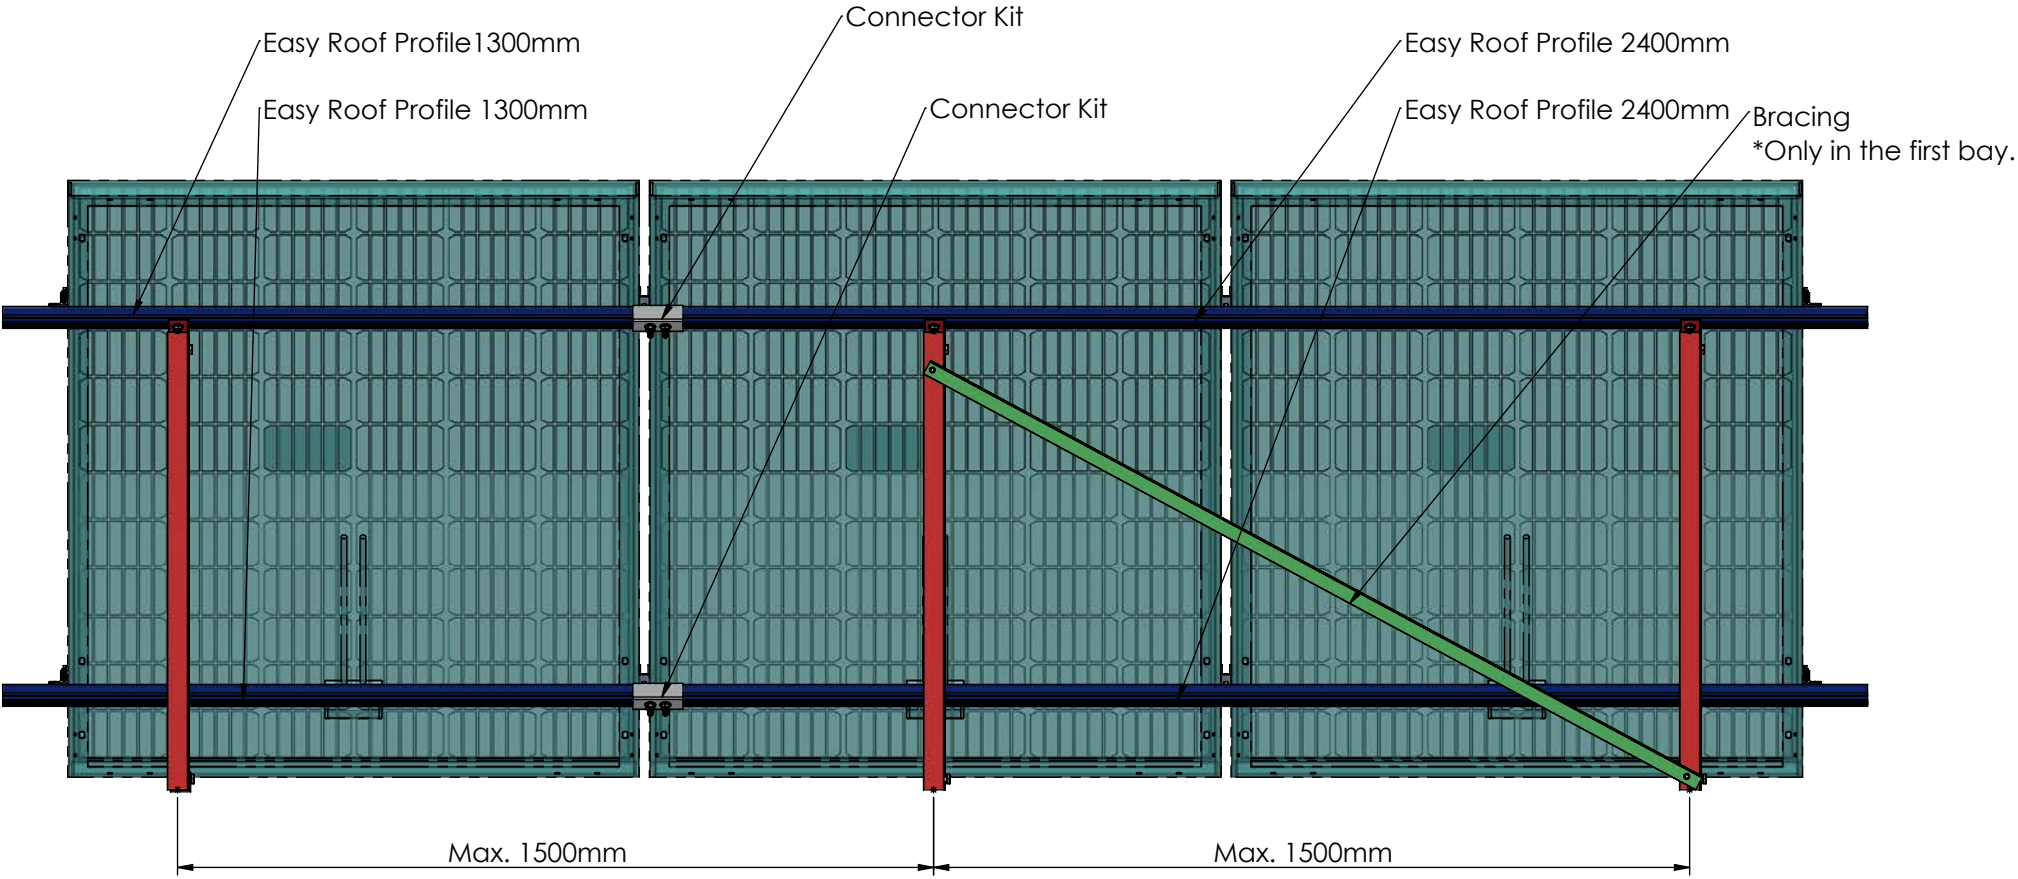


ASSEMBLY DETAILS

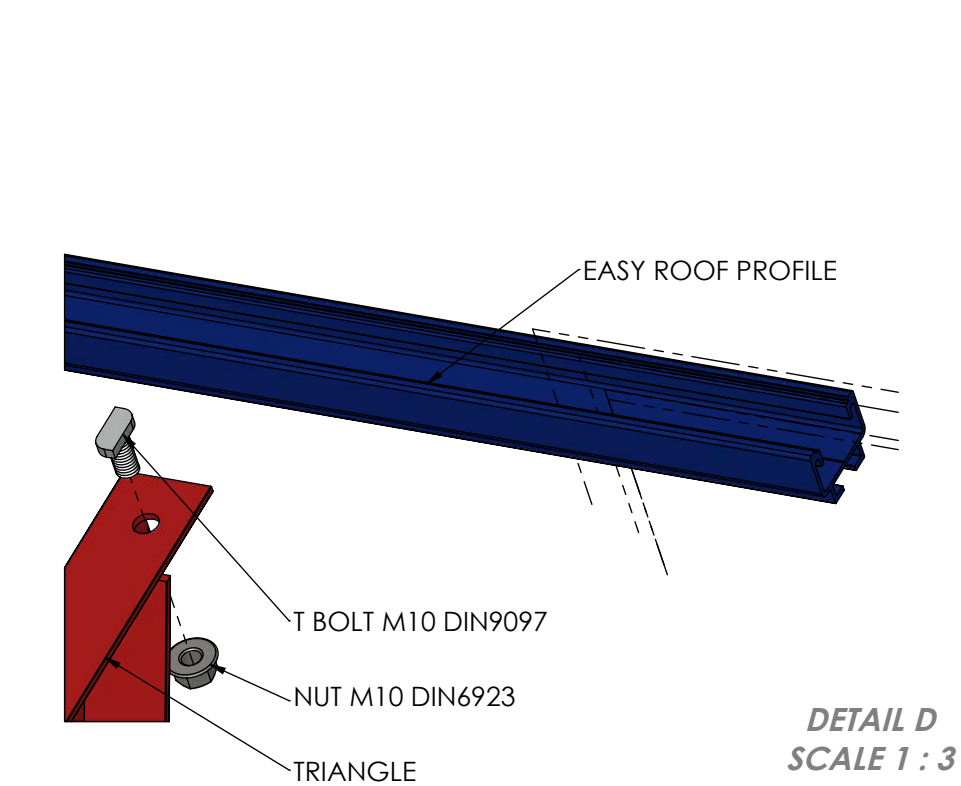


1° - FIXING THE EASY ROOF PROFILE ABOVE THE TRIANGLE WITH T BOLT M10 + NUT M10.

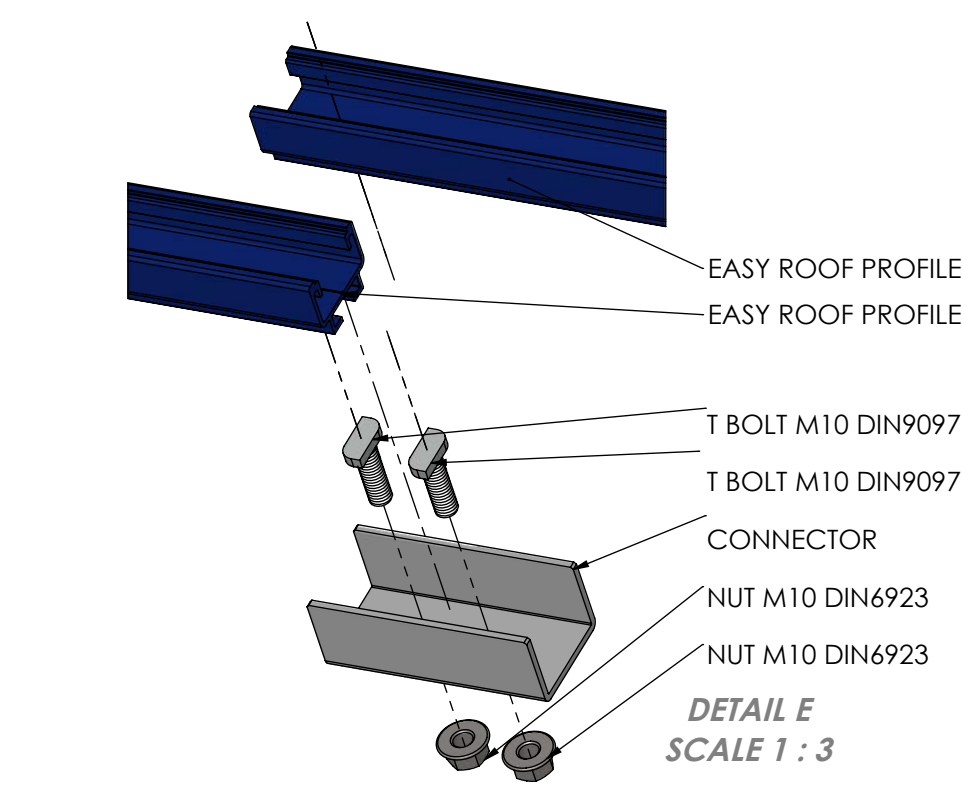




2° - FIXING THE CONNECTOR KIT TO JOIN THE EASY ROOF PROFILE'S WITH x2 T BOLT M10X20 + NUTS M10.

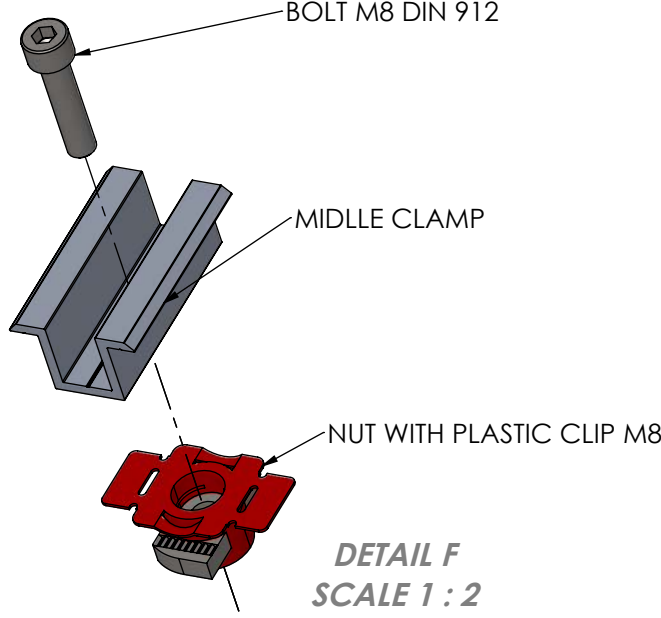

3° - FOR THE CONNECTION AMONG THE MODULES, AN X2 MIDDLE CLAMP KIT SHALL BE USED.

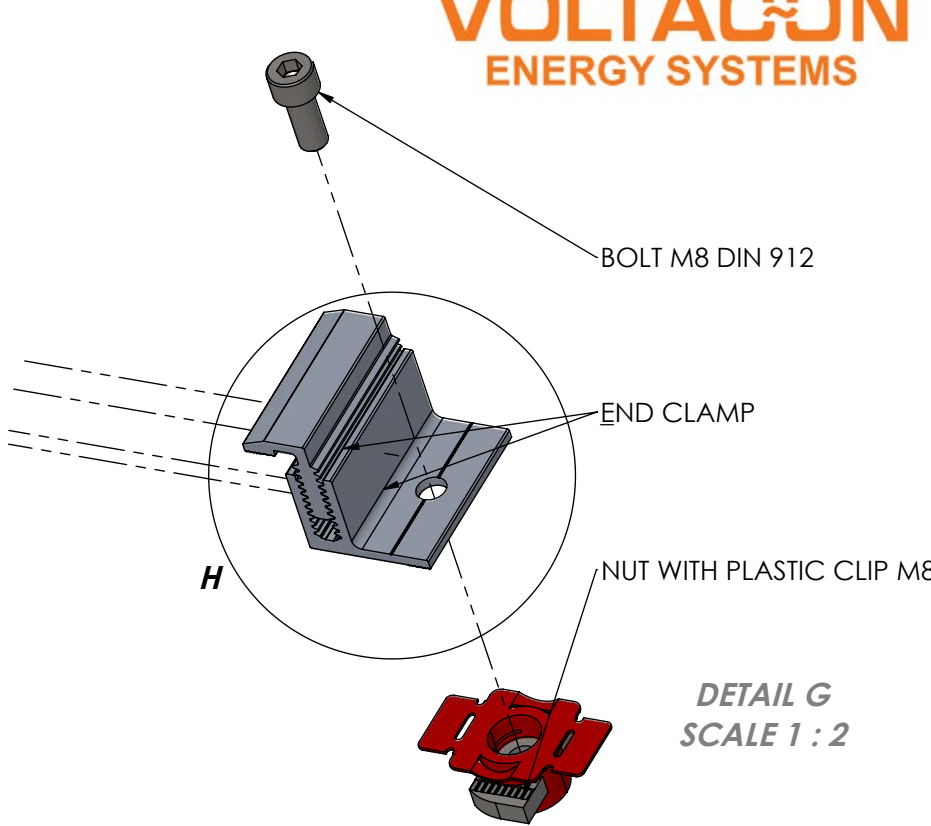

4° - AT THE BEGGINING AND AT THE END OF THE ROW THE MODULE'S FIXATION SHALL BE USED X2 END CLAMP'S KIT.

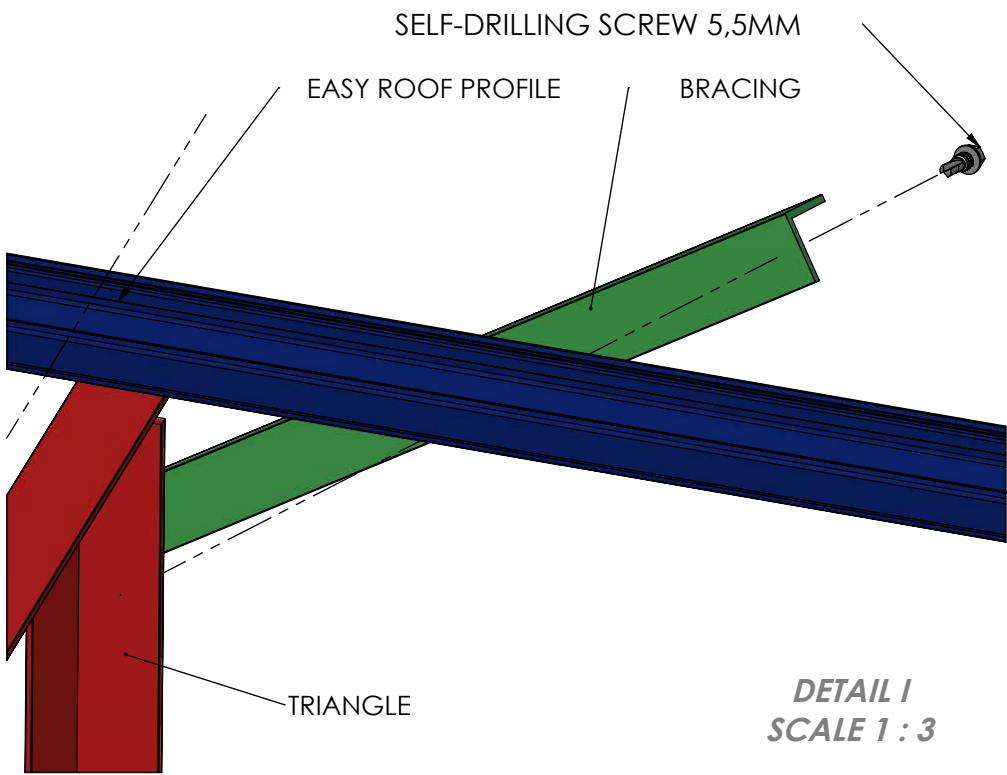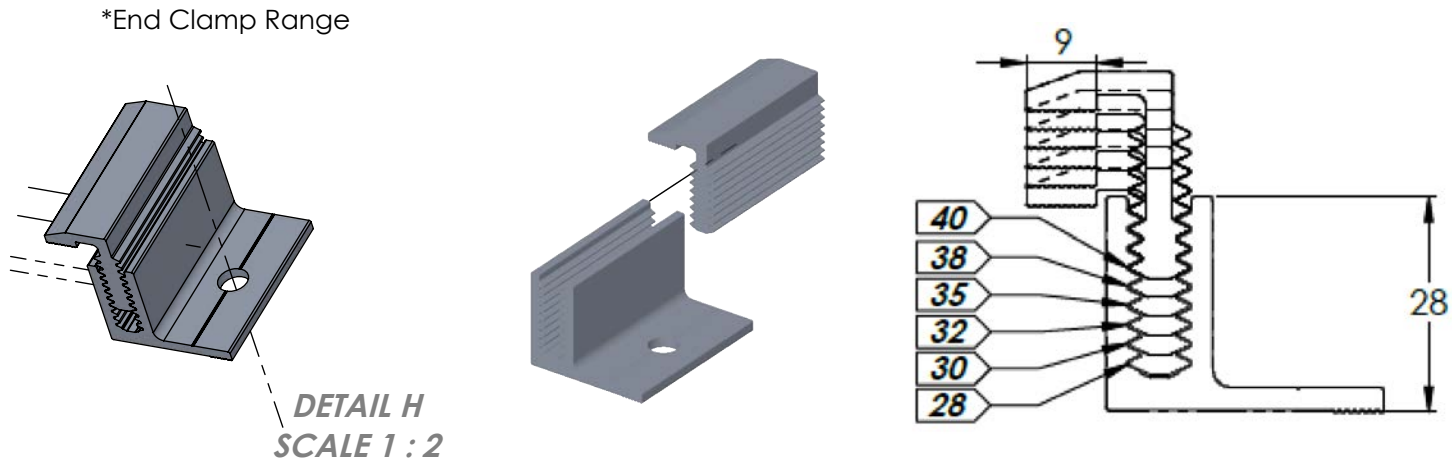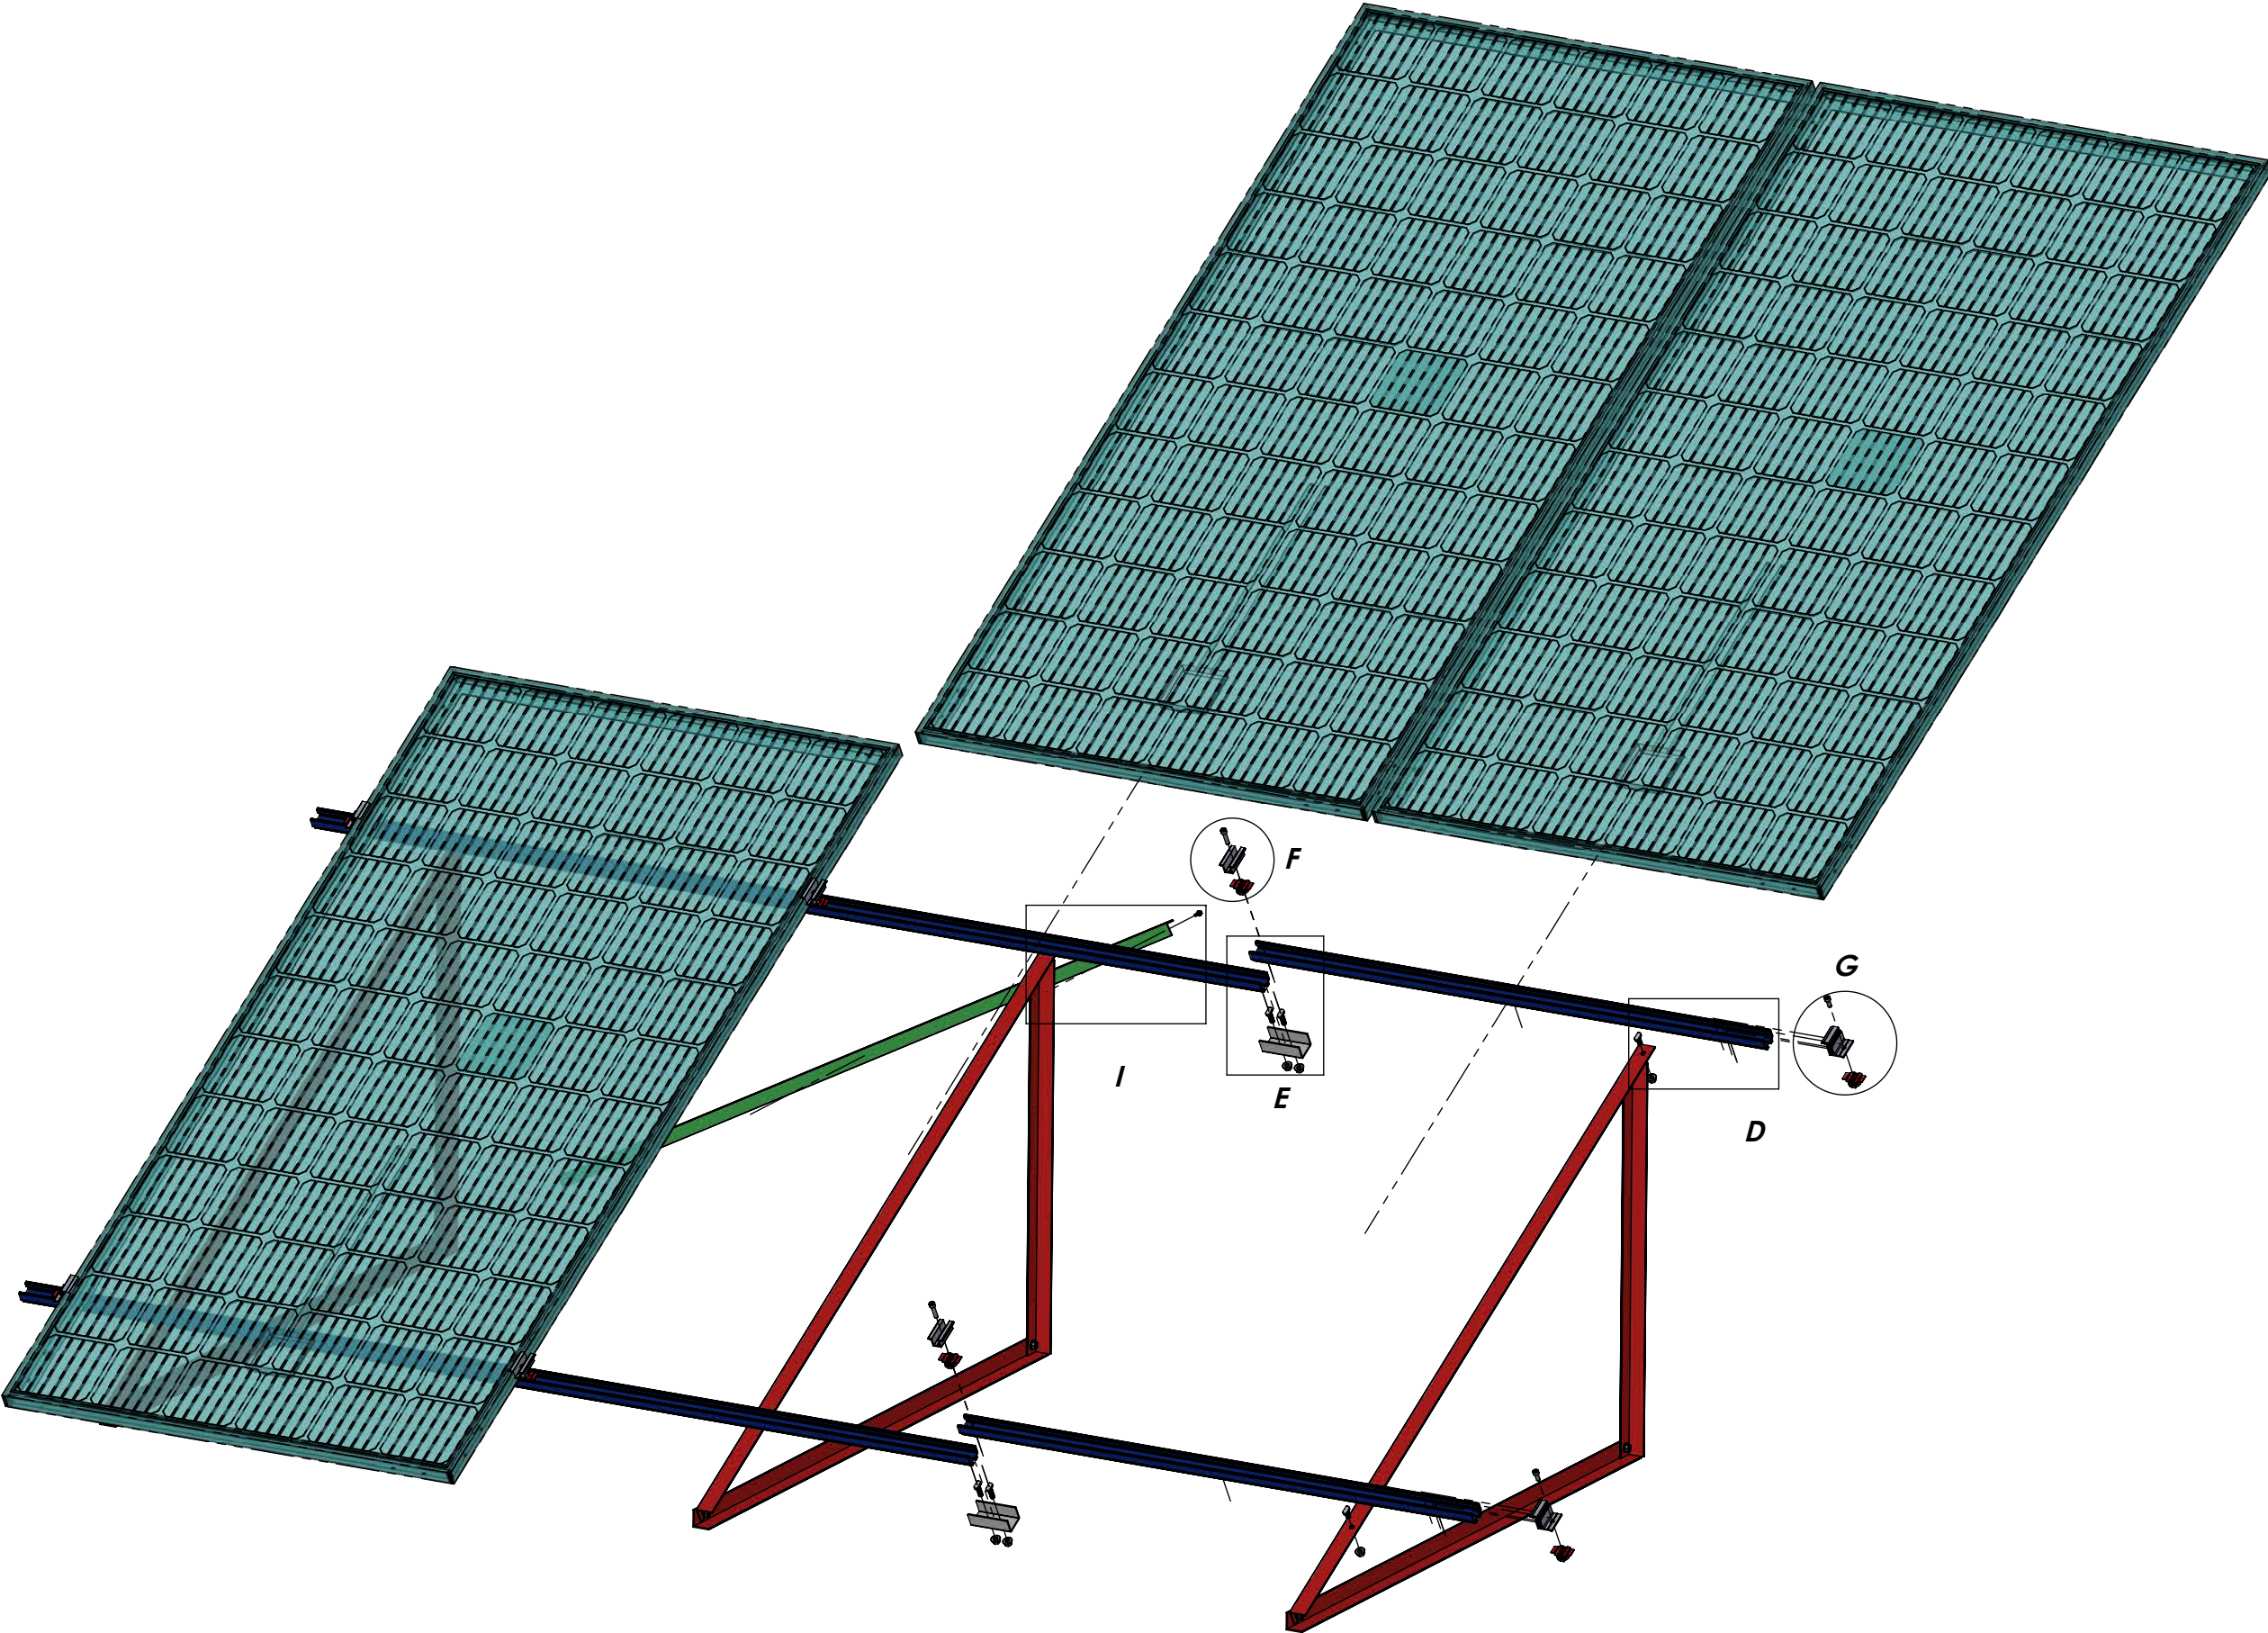

5° - ATTACH THE BRACING WITH X2 SELF-DRILLING SCREWS, ACCORDING TO THE LAYOUT OF IMPLANTATION.